

SECURITY DISTANCES


• From NOT combustible object :


- A > 500 mm B > 200 mm C > 200 mm D > 1500 mm

• From combustible object and from principal wall in rein forced concrete:

- A > 1000 mm B > 400 mm C > 400 mm D > 1500 mm

The minimal distance between the stove and every flammable object around it is 1.5 meter.

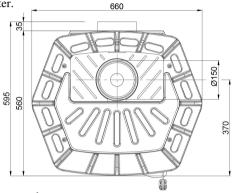

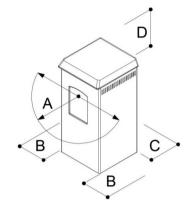

1.4 Connection

- Before connection check technical data reported in the technical plate (Chap. 4) and control that it correspond to the ones required in the order.
- All heating biomass equipment especially wood stove has to evacuate the combustion products in a flue built in conformity with normative in force.
- The following instructions describes "informations for a good installation "and it refers to a normative in force but it are not to be consider exhaustive for installations laws.

COLLAR EXHAUST FUMES ASSEMBLY

- Take off the collar from the fire door.
- Place the collar on the top of the stove (see the picture) assemble it with the screws.
- Place the Fume Ring inside the collar.
- Position the ceramic head and the sheet metal frame as shown in the image.

NB. If there are difficulties in pulling the chimney, try removing the Fume Ring.

