## **«LINCAR**

\_


## SECURITY DISTANCES


• From NOT combustible object :

A > 400 mm

B > 175 mm C > 125 mm

- From combustible object and from principal wall in rein forced concrete :
- A > 800 mm B > 350 mm C > 250 mm
- The minimal distance between the stove and every flammable object around it is 1.5 meter.

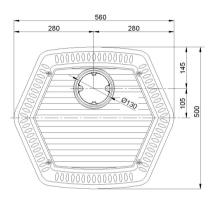

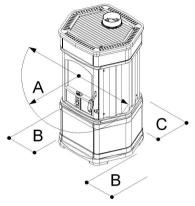

To measure from apparatus external surface for every models

## **1.4 Connection**

- Before connection check technical data reported in the technical plate (Chap. 4) and control that it correspond to the ones required in the order.
- All heating biomass equipment especially wood stove has to evacuate the combustion products in a flue built in conformity with normative in force.
- The following instructions describes ,, informations for a good installation ,, and it refers to a normative in force but it are not to be consider exhaustive for installations laws.

## COLLAR EXHAUST FUMES ASSEMBLY

- Take off the collar from the fire door.
- Place the collar on the top of the stove (see the picture) assemble it with the screws.

