
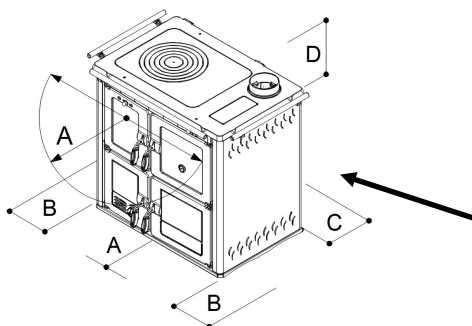
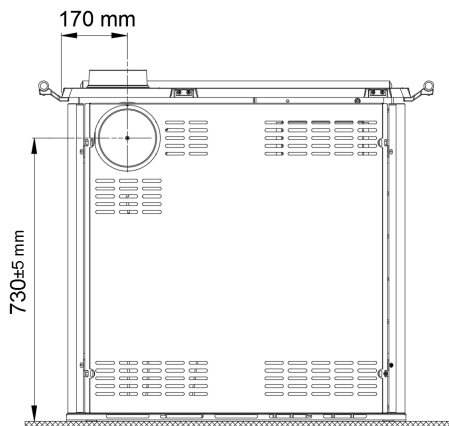


SECURITY DISTANCES

- From NOT combustible object :
 - $A > 400 \text{ mm}$ $B > 250 \text{ mm}$ $C > 250 \text{ mm}$ $D > 1000 \text{ mm}$
- From combustible object and from principal wall in reinforced concrete :
 - $A > 800 \text{ mm}$ $B > 500 \text{ mm}$ $C > 500 \text{ mm}$ $D > 1500 \text{ mm}$
- The minimal distance among the top of the appliance and any flammable object over it is 1.5 meter.

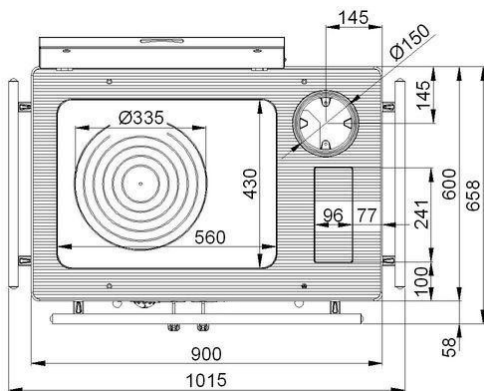

Valid for all Model - Measure from external side of the equipment

1.4 Connection

- Before connecting the appliance, check the technical data reported in the technical plate (Chap. 4) and control that it correspond to the ones required in the order.
- All heating biomass equipments, especially wood burning appliances, have to evacuate the combustion products in a flue, built in conformity with the normatives in force.
- The following instructions describe „ informations for a good installation „, and refer to a normative in force but they are not to be consider exhaustive for installations laws.

COLLAR EXHAUST FUMES ASSEMBLY

- The appliance is supplied ready for connection of the collar Vertical exhaust fumes.
- However, you can connect the collar exhaust fumes also in the back part of the stove

Mounting with Vertical Exhaust:

- Place the collar over the plate and with the date supplied screws screw the collar on the plate

